

Rainbow[®]...

THE MACHINE OF TOMORROW
... TODAY



OPERATION MANUAL

NOTICE FROM MANUFACTURER TO PURCHASER

Do not lose or mislay the name and address of the independent dealer or distributor from whom you bought the Rainbow® Cleaner. Look to him for advice on service and the nearest service outlet.

REXAIR,® INC. manufactures the Rainbow® Cleaner for sale to independent businessmen who set up their own, wholly independent businesses in their local communities. Rexair, Inc. limits its activities to manufacturing only.

KEEP IN CONTACT WITH YOUR INDEPENDENT DEALER OR DISTRIBUTOR

In case of loss of your independent dealer or distributor's name, if you will send us the serial number of the cleaner you purchased, we will forward to you the name, address and telephone number, as shown on our business records, of the independent distributor to whom we sold and shipped the Rainbow.



D3A
D3B



AS
ADVERTISED IN
Better
Homes
and Gardens®

D2A
D3B



Rexair, Inc.
TROY, MICHIGAN

..... SPECIAL NOTICE

REXAIR, INC. manufactures only and chooses to distribute its product through independent businessmen (distributors) who in turn assume the responsibility for reselling the Rainbow Cleaner directly to the consumer.

As a consumer you deal with the distributor. Any statement made by the distributor or his dealer becomes part of the basis of the bargain made when you bought the Rainbow. The law holds that seller accountable for any statements of fact about the merchandise.

Even though we the manufacturer neither deal directly with you, the consumer, nor provide a written warranty, the law imposes certain responsibilities on all manufactures who make consumer products. The products must be generally fit for their intended uses, and be free of defects. These implied warranties of merchantability and fitness run with the product, as provided by the law of your state.



800-523-0510


www.rainvac.com

NOTE: "CSA Certification applies to this product as a vacuum cleaner only in accordance with CSA Standard C22.2 #67 Vacuum cleaners and Floor Polisers."

TABLE OF CONTENTS

Notice from Manufacturer to Purchaser	Inside Front Cover
The Rainbow Cleaning Principle	3
The Rainbow, the Appliance of Many Uses	4
Operation and Care of the Rainbow	6
How to Clean the Nylon Hose	6
How to Use the Rainbow:	
To Shampoo Rugs and Carpets	7
To Clean Floors	7
To Clean Walls	7

To Clean Brush	8
To Clean Upholstered Furniture	8
To Clean in Narrow Places	8
For Dusting	9
To Clean Stair Carpets	10
To Deodorize	10
To Aromatize	10
To Spray	10
Additional Uses for the Rainbow	11-12
Rainbow Supplies and Equipment	13-14
Important Safeguards and Wet Pick Up Instructions	Back Cover Flap

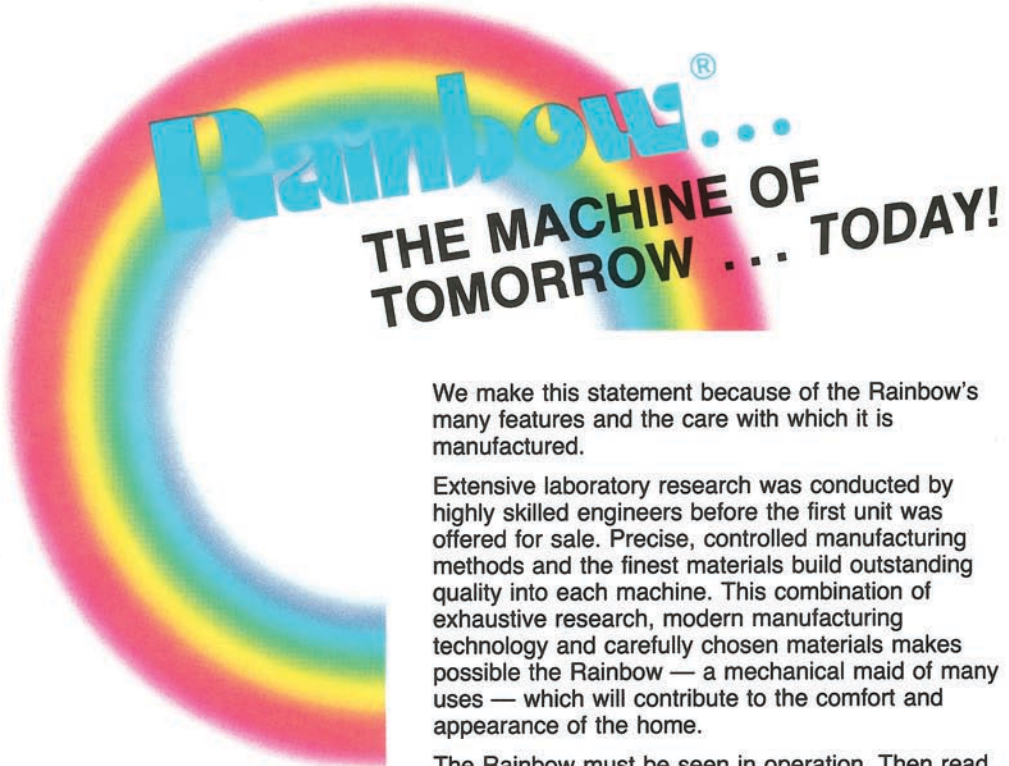

Rexair, Inc.

*Manufacturers
of the
Rainbow*

We make this statement because of the Rainbow's many features and the care with which it is manufactured.

Extensive laboratory research was conducted by highly skilled engineers before the first unit was offered for sale. Precise, controlled manufacturing methods and the finest materials build outstanding quality into each machine. This combination of exhaustive research, modern manufacturing technology and carefully chosen materials makes possible the Rainbow — a mechanical maid of many uses — which will contribute to the comfort and appearance of the home.

The Rainbow must be seen in operation. Then read this Operation Manual. The advantages of the Rainbow's concept of curtailing dust will become even more evident.

The Rainbow cleans clean. As the water-trapped dust and dirt is disposed of there is the satisfaction of knowing it is out of the home forever.

This manual tells how to operate and care for the Rainbow, and illustrates its many uses. Read it carefully!

THE **Rainbow**[®] CLEANING PRINCIPLE



HOW THE RAINBOW TRIUMPHS OVER DUST!

See the floating dust made visible by the sunbeam streaming through the window? It is everywhere in the house, not just where there are sunbeams.

As it settles all over the home this housedust is unsightly, causing homemakers hours and hours of time and effort as they do their best to get the better of it.

It is because of household dust that painted walls need washing or repainting, papered walls require cleaning or repapering and furnishings must be cleaned and renovated. In addition to this expense, dust hastens the deterioration of furnishings.

Old fashioned cleaning methods are inefficient because they attempt to handle dust in a dry state. There is more dust in the air after even the most modern cleaning appliance is used than there was before because at least some of the dust picked up is sifted back into the room.

No longer is a dust mop, dust cloth, broom or electric sweeper needed.

Only the Rainbow is truly effective in curtailing this unwanted, unsightly, expensive and work-causing housedust.

Nature controls dust outdoors by wetting it with rain, snow, sleet, fog and dew. The secret is "WET DUST CANNOT FLY"

Rexair, manufacturer of the Rainbow, found a way to create a rainstorm in the home without getting anything wet, except the housedust which is trapped in water. The exclusive Rainbow[®] Air Separator, whirling quietly at an amazing speed, makes this possible. The water-trapped dust is then poured away, out of the home forever.



PLEASE READ VERY CAREFULLY . . .

PROPER CARE FOR LONG LIFE OF THE RAINBOW

SEPARATOR — Clean the separator frequently. We recommend that this be done weekly. Remove separator with a screw driver, clean inside and out with soap and water using the Rainbow Separator Brush, which is supplied. Dry and replace the separator. Tighten the nut easily to hold the flat rim of the separator snug. Do not force the separator nut so it depresses the separator into the shaft onto which the nut is threaded. **CAUTION** — ALWAYS REPLACE THE SEPARATOR IMMEDIATELY AFTER CLEANING. DO NOT OPERATE WITHOUT THE SEPARATOR.

WATER — Do not clean too long with one filling of water. Check water during cleaning, and if water is too thick with lint and dirt, empty dirty water and put

in clean water. The correct water level is the top of the post located in the center of the Rainbow[®] Water Basin. NEVER FILL BASIN ABOVE POST.

BASIN — After each cleaning the Basin should be emptied, washed out thoroughly and dried. Leave the Rainbow OFF Basin while storing between each cleaning. DO NOT PUT THE RAINBOW AWAY WITH EITHER WATER OR DIRT IN BASIN.

Neglecting part or all of the above instructions will cause unnecessary trouble and expense for service. Following these instructions will give you years of trouble-free, efficient service.

(See directions and pictures on page 3 opposite.)



WATER-WASHED CLEAN ...

Only the Rainbow combines the principle of Hydrodynamics (water in motion) and Aerodynamics (air in motion) to assure a cleaner home and a mechanical maid of many uses.

It freshens the air, while it cleans by drowning the dust and dirt in water. Everything in the home is cleaned just as the dirty dishes and clothing are cleaned — using nature's terrific water filtering principle... water washed clean.

Rainbow® THE APPLIANCE OF MANY USES...

1. This is the **SUCTION END** of the Rainbow. It is used for all cleaning operations. Here dust and dirt are forcefully drawn into the Rainbow where it is trapped in a turbulent water bath.

2. This is the **BLOWER END** of the Rainbow. It is used with Hose attached to operate the Sprayer Attachment, and for other operations requiring a jet of clean air. Without the Hose and with Blower Cap in place, washed air escapes from the peripheral exhaust. The Rainbow is used in this manner to deodorize or aromatize.

3. This is the **OFF-ON SWITCH**. Easily operated by a touch of the fingertips.

4. This is the **Rainbow SEPARATOR**. It makes it possible to trap dust and dirt in the Water Basin. Clean it frequently. (See operating instructions).

5. This is the **WATER BASIN**. Water level should be even with the top of the post located in center of the basin. Use cold tap water. Capacity two quarts. Empty, thoroughly wash and dry after every use. (See operating instructions.) The Rainbow has a rugged, powerful, totally enclosed, sealed, by-pass motor generating 1.3 horsepower with 880 watts electrical intake (0.9 h.p. output). Because it has sealed bearings it requires no oiling. This high speed motor whirls at the rate of 14,000 revolutions per minute creating a movement of 65 cubic feet of air per minute. The Rainbow uses a triple, turbine-type fan assembly to create the powerful air flow which so effectively removes deeply embedded dirt.




A VERSATILE CLEANING DEVICE...
IT IS THE ANSWER TO THE AGE-OLD QUESTION
"HOW TO CURTAIL THE HOUSEDUST PROBLEM?"



1



2

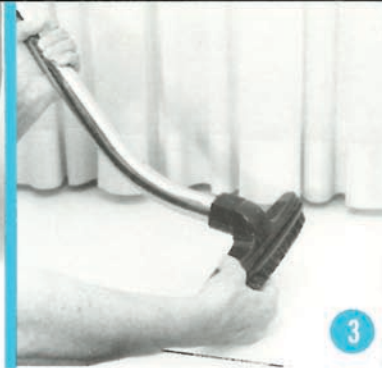

3

OPERATION and CARE

1 Fill Water Basin with cold tap water UP TO THE TOP OF THE POST located in the center of the Basin. This is the correct amount of water (2 quarts) for all cleaning operations performed by the Rainbow.

2 Set power unit on top of Basin so suction end protrudes through power unit side opening. Hook the two clamps to the rim of the Water Basin and snap up. Place on Dolly (wheels).

3 Insert the long curved Bottom Wand into the Floor Brush by matching grooves on Tool with bumps on Wand. Give Tool half a turn.

4 Connect the Straight Wand and Handle (Short curved Wand) and insert into the Bottom Wand with Tool on end.

Should the Wands come apart while in use, tap lightly with Curved wand, between slots at end of the Bottom Wand and/or Straight Wand until a snug fit is obtained.

Should Wands wedge tightly together, hold parallel to the rug or carpet and drop them. The vibration will cause them to loosen. Repeat the process if necessary. If the Wands are properly adjusted for snugness they will wedge together.

5 Push soft end of Hose over hump on handle.

6 Insert other end of Hose into the suction end of the Rainbow until it clicks. To remove, press spot on coupling marked "PRESS" and pull Hose from machine.

WARNING: Electricity in the home has made it possible for Mrs. America to have all sorts of electrical servants such as irons, mixers, washers, dryers, T.V.s, etc. But because of the danger of shock any electrical appliance should be only used as directed. There should be no unapproved use of any electrical product.

Electrical leakage and shorts can occur wherever there is electricity. As with any other electrical appliance, if the user is Not Grounded there is generally no serious hazard. But if the user is standing on the ground in a basement, or in a room where a film of water can reach a ground, severe shock could result. Therefore, use the Rainbow only as directed in this operation manual. Refer to the Important Safeguards and Special Notice Section on the back cover flap.

This, of course, is true of any use of electricity with electrical fixtures or appliances that can develop shorts.

Follow instructions Exactly!




7



8



9

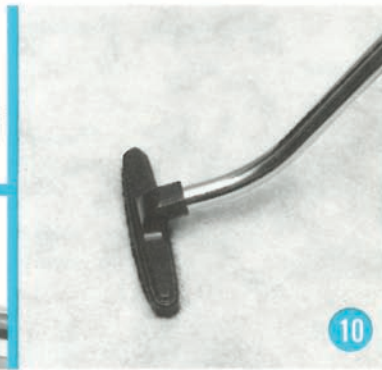

10

THE **Rainbow**®

NYLON BRAIDED HOSE



4



of the Rainbow®

7 Connect Electrical Cord to outlet. Rainbow's Long Cord makes it possible to reach any part of the room and hard-to-get-at corners. Snap switch on Power Unit to "ON" with a flick of the fingertips.

8 Adjust Suction Control Sleeve on top of Handle. Close opening with Suction Control Sleeve for full power.

9 To reduce suction push Band so opening in Handle is exposed. Correct adjustment is quickly determined while cleaning.

10 With the machine at the left and to the rear, hold the Handle with the right hand at a comfortable angle. Grasp the Hose with left hand making a loop behind the back. Slowly guide the tool back and forth in smooth and easy stokes. Let the tool and the Rainbow do the work.


11 (1) To empty Water Basin release the two clamps. (2) Remove Power Unit. (3) Pick up Water Basin by the curved suction end and pour dirty water from the opposite side into an acceptable drain. (4) The heavier particles of foreign matter, such as soaked lint, etc., will fall (settle) to the bottom of the basin when pouring out the dirty water.

Store Rainbow and attachments in a dry place.

(5) Next, it is recommended that you simply remove the wet, foreign matter, such as soaked lint, etc., by placing (dumping) it into a plastic disposal bag or waste container instead of disposing of it into the commode or drainage system. REMINDER: The water in the Basin must remain liquid to effectively trap the dust and dirt, therefore DO NOT CLEAN TOO LONG WITH ONE FILLING OF WATER, WHEN WATER BECOMES THICK WITH LINT AND DIRT, EMPTY WATER BASIN AND REFILL.

12 Wash out Water Basin, rinse and dry thoroughly. Leave Rainbow Power Unit OFF basin until the next time it is used. DO NOT STORE THE RAINBOW WITH WATER OR DIRT IN THE BASIN.

13 SEPARATOR — Clean the separator frequently. We recommend that this be done weekly. Remove separator with a screw driver, clean inside and out with soap and water using the Rainbow Separator Brush, which is supplied. Dry and replace the separator. Tighten the nut easily to hold the flat rim of the separator snug. Do not force the separator nut so it depresses the separator into the shaft onto which the nut is threaded. CAUTION — ALWAYS REPLACE THE SEPARATOR IMMEDIATELY AFTER CLEANING. DO NOT OPERATE WITHOUT THE SEPARATOR.

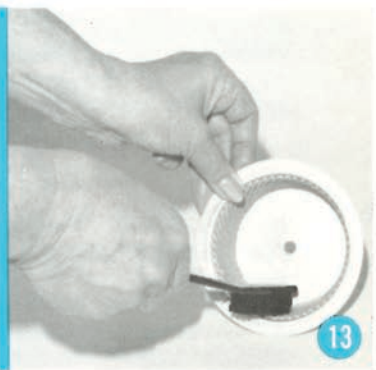


The Nylon Braided Hose is light in weight and truly flexible. The Handle at the end is easy on the hands, and assures a firm hold of the hose at all times. To clean: insert hard coupling marked "PRESS" into blower opening after removing Blower Cap. Place the soft end of the Hose into the suction opening. Switch on Motor and jiggle Hose. Any dirt stuck in the Hose will be drowned in the Rainbow's water bath.

TO SHAMPOO RUGS AND CARPETS

A Rainbow® Rexafoamer (obtainable at slight additional cost) produces "dry" suds from liquid shampoo. This simple attachment will further improve the quality of your rug or carpet cleaning. **BEFORE SHAMPOOING RUGS OR CARPETING BE SURE THE MANUFACTURER DID NOT SPECIFY "DRY CLEAN ONLY."** Clean them thoroughly with the Rainbow before shampooing.

Fill jar 3/4 full of Rainbow® Shampoo Concentrate and water mixture as directed on bottle label. Attach Spray and Hose as shown on page nine. Spray a small section of carpet with solution, lightly. Do not saturate. Turn off the Rainbow. Remove Sprayer Tip "B". Attach Rexafoamer as illustrated. Start the Rainbow. Press Plunger "A" and distribute bands of suds approximately three inches apart over area that was lightly sprayed with solution.

With Floor Brush attached to three Wand Sections brush "dry" foam over surface of nap with a scrubbing motion until it almost disappears. (Rainbow should not be in operation during this period.) Attach Hose to Suction End of Rainbow and to the Wands with Floor Brush attached. Fill Basin with about a pint of water. Start Rainbow. Brush over area just shampooed finishing with a stroke against the nap so that nap stands up. Loosened dirt and grim will be collected into Rainbow's swirling water bath, rugs and carpets will brighten up "like new." Empty and rinse the Basin at first sign of suds build-up. Proceed to next section of rug or carpeting and repeat process, making sure to overlap to avoid unshampooed areas.

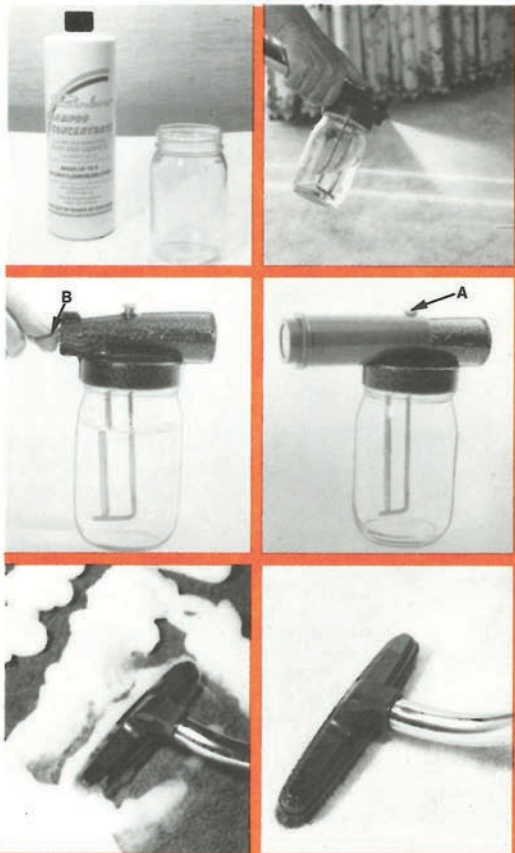


TO CLEAN FLOORS ...

USE COMBINATION FLOOR AND WALL BRUSH ... Dust and gritty dirt from cracks and crevices must be removed from floors to prevent scratching and keep them attractively clean. Use full suction when gliding Tool over floor. Tool will pick up surface litter and dirt from cracks and crevices.

To remove dust and lint from Floor and Wall Brush, brush it clean with open end of Hose.



TO CLEAN WALLS ... USE COMBINATION FLOOR AND WALL BRUSH ... All walls ... papered, paneled or painted ... stay cleaner longer when dust and dirt are removed regularly. Attach Handle to Bottom Wand and Tool, as illustrated. Brush is locked into position, it will not fall off. Best results are obtained when only the top edge of the bristles are allowed to touch the wall and cleaning is done with a downward stroke. With a slight space between the wall and the bottom edge of the bristles, dust is whisked away before the bristles touch it, thus avoiding streaks.

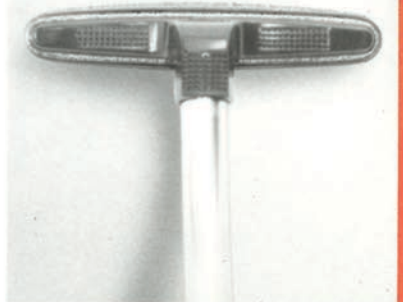



TO CLEAN THE RAINBOW® FLOOR and WALL BRUSH ...

Remove Furniture Guard and snap off Brush from Holder. Wash brush in WARM soapy water. Reassemble when dry. Beaded edge of Guard should be up. Clean brushes last longer ... clean best.




TO CLEAN UPHOLSTERED FURNITURE ...

USE UPHOLSTERY TOOL WITH JET BRUSH AND CREVICE TOOL ... Hard-to-get places accumulate unsightly dust and dirt. Deeply imbedded dirt cuts fabric life.

The Rainbow Upholstery Tool, with Jet Brush attached, removes deeply imbedded dirt and surface litter, even cat hair, disappears like magic while the Rainbow Crevice tool gets dust and dirt from behind cushions and other deep recesses.

Attach Upholstery Tool to Curved Wand (Handle). A little twist as they are pushed together will make them hold securely. Use with full suction. To remove dirt move Tool over areas to be cleaned with slow even strokes. To clean Jet Tool Brush, slide Upholstery Tool out of the slots on top of the brush. Keep brush clean by whisking with open end of Hose. This Brush may also be washed.


To reach crevices and between cushions slip Crevice Tool on to Curved Wand (Handle). Use full power. Crevice Tool will remove dirt and dust from deep-seated areas. Keeps the furniture really clean.

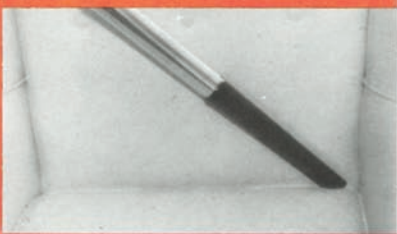

TO CLEAN IN NARROW PLACES ...

USE CREVICE TOOL ... To clean in low areas such as between radiator sections, under radiators, along floor edges and baseboards, deep down between automobile cushions, attach Crevice Tool to the Curved Wand (Handle)

Use full suction, with Suction Control Sleeve closed. The unique design of the Rainbow® Crevice Tool enables it to suck dirt and grim from the tightest areas.

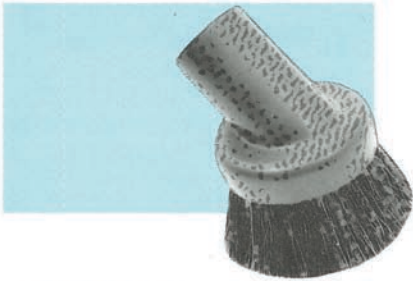

TO DUST...

USE DUSTING BRUSH . . . Because the Rainbow drowns dust and dirt in water and releases only washed air back in the home, dusting is always at a minimum. However, to keep the home thoroughly clean, don't forget to dust those overlooked places such as venetian blinds, lamp shades, lighting fixtures, moldings, etc.

Attach the Dusting Brush to the Curved Wand (Handle). Move the Brush lightly over all the surfaces to be cleaned. The soft bristles will not harm the finest furniture, fixtures or fabrics.

On lamp shades and similar fragile objects reduce the suction by opening the Suction Control Sleeve.

To dust over door frames, picture, etc., attach Dusting Brush to Curved end of Handle (the end usually inserted into Hose) as illustrated and opposite end of Handle into Hose. This extra curve makes it possible to get behind beveled edges.

Be thorough when dusting. Don't forget books, pianos, television sets, window frames, heat and cold air vents. Once cleaned by the Rainbow it is always easier to keep the home attractively clean.



Rainbow®
TOMORROW'S
CLEANING MACHINE . . .
TODAY!

TO CLEAN THE DUSTING BRUSH...

To clean the Dusting Brush, whisk open end of hose over bristles. To remove greasy lint and dirt, pull brush from plastic back and wash with warm soapy water.



TO CLEAN STAIR CARPETS...

USE UPHOLSTERY TOOL WITH JET BRUSH ... Attach Upholstery Tool (with Jet Brush assembled) to Handle. Remember, a little twist as they are pushed together will make them hold securely. Insert Handle into Hose and attach to machine. Remove the Rainbow from Dolly. Allow the Rainbow to rest solidly on stair above the one being cleaned. Move the Rainbow up one step at a time and continue cleaning.

To clean rug riser turn Tool one-half turn and use as illustrated.

TO DEODORIZE...

Add a few drops of Rainbow® Deodorant Air Freshener or a favorite deodorizer to the water in the basin. Place Airator (optional) over Suction End of Rainbow, turn machine on. The 360 degree peripheral exhaust quickly refreshes the air in the entire area, alleviates objectionable household odors.

TO AROMATIZE...

Put a few drops of any Rainbow® Fragrance such as Violet, Apple Blossom, Siberian Pine, Gardenia or any other desirable scent, in the Rainbow Water Basin. Assemble the Rainbow on the Basin with Airator (optional) in place over the intake and turn on switch. In a matter of minutes a pleasant fragrance will permeate the room.

TO USE THE RAINBOW SPRAYER...

Fill glass sprayer jar 3/4 full of solution to be used. Screw on Sprayer Cap and attach to Handle (Short Curved Wand) with a twisting motion so Sprayer is held firmly in place. Close Suction Control Sleeve for full power. Attach Handle to Hose, Remove Blower Cap and attach Hose to Blower End of the Rainbow. Use thumb to push Plunger (A) down. If spray is too heavy turn Plunger button (A) clockwise; if spray is too fine turn Plunger Button (A) counterclockwise until correct volume of spray is produced ... Sprayer Tip (B) should be tight at all times.

Release of Plunger (A) automatically stops spray. It is not necessary to turn Rainbow on and off.

When spraying job is completed, clean jar. Add water or solvent (depending upon material sprayed) and spray through Sprayer. Clean Tip. Do not allow particles to remain in Jar, Sprayer or in Tip.

TO SPRAY INSECTICIDES, MOTH PROOFING SOLUTIONS and OTHER LIQUIDS ...

Follow directions for using Sprayer Attachment. Adjust Sprayer to volume desired for use and solution. When spraying in closets adjust to lowest volume. With the Rainbow Sprayer Pinpoint Adjustment Plunger it is easy to spray most liquids with accuracy and uniformity.

USE THE

Rainbow®

**FOR THESE
ADDITIONAL
HOUSEHOLD
JOBS...**

HOME, ROOM, CLOSET DEODORIZOR

Add a Rainbow Deodorant such as Oil of Pine Needles or one of Rainbow's pleasant Fragrances to the Water Basin. Place Rainbow in closet, turn on, close closet door and let the machine run for about five minutes. Closet stuffiness caused by poor air circulation is quickly corrected this easy way.

CLEAN MATTRESSES, PILLOWS, BLANKETS

Use Upholstery Tool without Jet Brush. It is advisable to use full suction power whenever possible to remove deeply imbedded dust and dirt. For lightweight blankets open Suction Control Sleeve for reduced suction.

CLEAN DRAPES AND CURTAINS

Use Upholstery Tool with or without Jet Brush. On delicate fabrics use reduced suction. If more wand length is needed use handle and Straight Wand Section. Be sure to dust the top of fabric and wooden valances. It's easy to do with the Upholstery Tool with Jet Brush attached.

CLEAN FUR COATS AND CLOTHING

Use either the Upholstery Tool or Dusting Brush for surface cleaning. Use the Crevice Tool for pockets, cuffs and creases. Regular Rainbow cleaning is excellent protection against moths and will help restore articles to their original appearance.

GROOM PETS

Use either the Upholstery Tool with Jet Brush or Dusting Brush to groom dogs and cats. Dust, dirt and loose hair are easily removed by the Rainbow's silent powerful suction. Pets enjoy it, too. Frequent grooming cuts down need for baths.

CLEAN HATS

Use the Dusting Brush to clean all types of hats, felt, fur or flowered. Reduce suction if necessary on delicate women's hats with high ornamentation. Use full suction for men's hats. Dust and dirt will disappear as if by magic.

CLEAN SCREENS

Use either the Upholstery Tool with Jet Brush or Dusting Brush attached to Handle with full suction. Now it's easy to do screens indoors. Rainbow's water bath drowns dust and dirt and exhausts only washed air into the room. Rainbow's powerful suction removes those fine particles of dust and dirt that refuse to come off when using old fashioned cleaning methods such as the garden hose.

DUST BOOKS, MAGAZINES, RECORDS, TAPES

Use the Dusting Brush. Will not harm those records or tapes. Makes it easy to keep book shelves and bookcases clean. Use the Rainbow, too, to dust inside the HiFi set or Record Player.

CLEAN FOLIAGE OF REAL AND ARTIFICIAL HOUSE PLANTS


Use the Dusting Brush. Reduce suction and gently brush over leaves. Dust which hides natural leaf sheen is quickly removed.

CLEAN WOOD, LINOLEUM, TILE FLOORS AND WALLS

Use Floor Brush to pick up dust, lint, remove cobwebs without effort.

CAUTION: Do not use the Rainbow to clean the fireplace or the chimney flue, or any other oily or greasy compounds (such as soot) or ashes, ceramic dust or other powdery substances that are impervious to the wetting action of water.

**USE RAINBOW ONLY AS DIRECTED IN
THIS OPERATION MANUAL**

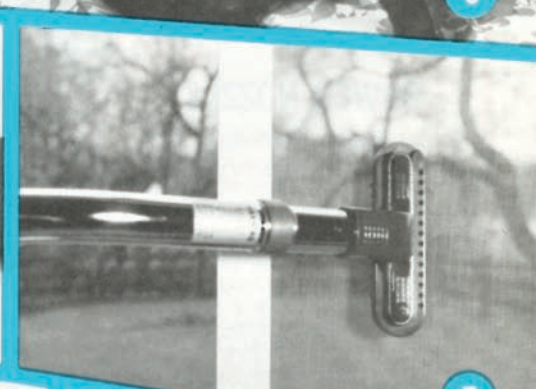



MASSAG-AIR

For massaging the scalp, loosening and mechanically removing dandruff. When used in conjunction with the Rainbow's suction, dandruff is mechanically removed.




16" FLOOR BRUSH

Those "big cleaning jobs" are easily and effectively handled with Rainbow's 16" Floor Brush. Wide expanses of bare floor are swept free of dust and dirt with a minimum of effort. It is recommended that when using the 16" Floor Brush the four quart basin be used because of its greater capacity.



FLOOR SQUEEGEE

You can scrub your floors in your "Sunday Best" without getting your hands wet, using the new Rainbow Floor Squeegee. almost effortlessly your floors come clean . . . ready for waxing. Scrubbing linoleum, tile and wood floors is a breeze with the new Rainbow Floor Squeegee.

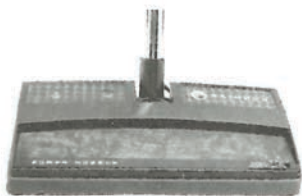

POWER NOZZLE

The new Rainbow Power Nozzle adds motorized beater brush action to the already superlative cleaning efficiency of the Rainbow. The rapidly revolving brush and beater bars loosen lint, threads, hair and dirt for easy pick-up into the Rainbow water basin. It connects quickly and conveniently to the Rainbow and makes most deep nap, pile and shag carpets easier to groom and clean. The Fully Motorized power nozzle is easy to use, sturdy and lightweight.

WARNING: SEVERE ELECTRICAL SHOCK COULD OCCUR IF USED OUTSIDE OR ON WET SURFACES.



4-QUART BASIN

The Rainbow 4-Quart Basin is available for those "bigger" cleaning jobs. It's ideal for larger homes. The larger Water Basin doubles cleaning capacity. The Rainbow so equipped and used with the Dolly, makes an ideal combination for handling those "over-sized" cleaning jobs.



HAIR DRYER

It Washes the Air That Dries Your Hair

. . . You will have softer, lovelier, easier-to-manage hair when drying hair with this excitingly new Rainbow Hair Dryer. Warm, water-washed air will have your hair dry before you know it . . . so easy to use, too! Rainbow's Hair Dryer permits free movement, enabling you to relax, sew or tend to other household duties while your hair is dried with water-washed air! Simply wash your hair, set and follow the easy instructions. See how quickly and beautifully your hair dries.



SEPARATOR BRUSH

Its sturdy nylon bristles and curved handle make it "just right" for convenient cleaning of the Rainbow Separator.

DEVELOPED FOR USE WITH THE RAINBOW



REXAFOAMER

The Rainbow Rexafoamer makes "dry" suds from liquid shampoos. The rugs and carpets can be shampooed inexpensively, yet professionally, right in the home. All the inconvenience and bother is eliminated and the cost is surprisingly little.



AERODYNAMIC JET RUG TOOL

Louvered design permits airflow to penetrate deep into carpets and rugs. Picks up the finest of dust particles with unsurpassed efficiency.



2-GALLON BASIN

Specially designed for use in larger homes, with big carpet area. Made of spun aluminum, which adds to its attractive appearance. Large diameter, caster-type wheels, for easy portability from room to room. Multiplies cleaning capacity four times.

WARNING:

Keep all Rainbow supplies (whether in liquid or capsule form) out of the reach of children, just as you would any other household cleaning product.



RAINBOW PINE NEEDLE OIL

Rainbow Pine Needle Oil adds a delightful Pine Needle freshness to the home. Simply break only one capsule into the water in the Rainbow Water Basin and bring the fragrance of pine indoors. Box 100 capsules.



RAINBOW FRAGRANCE PAC

With the Rainbow Fragrance Pac the home can be made as sweet and refreshing as a spring garden. The four Rainbow Fragrances, Apple Blossom, Violet, Siberian Pine and Gardenia, come packed in a handsome plastic box.



RAINBOW FLOOR CLEANER CONCENTRATE

Rainbow Floor Cleaner Concentrate is ideal for thoroughly cleaning bare floors, whether they are wood, linoleum or tile of any kind. No backbreaking scrubbing; just spread on Floor Cleaner Concentrate in recommended solution and let it do the work. Quart.



RAINBOW SHAMPOO CONCENTRATE

Rainbow Shampoo Concentrate quickly removes unsightly traffic film from rugs and carpets. Safe for all washable materials non-flammable. No hard scrubbing needed, cleanses thoroughly, dries quickly. Quart.




RAINBOW DEODORANT-AIR FRESHNER

A small quantity of Rainbow Deodorant-Air Freshener added to the water in the Rainbow Water Basin alleviates objectionable household odors like fish, tobacco, cabbage, paint, etc. Quart.

IMPORTANT SAFEGUARDS

1. Please read all instructions carefully. Use Rainbow only for its intended use as described in the instructions. The use of attachments not recommended by the appliance manufacturer may cause hazards.
2. Make sure your home electrical system is properly grounded, whether your home is wired for two prongs or three.
3. If your home is wired for two prongs do *not* use the Rainbow unless you properly use an *adapter* each time you change outlets. (Refer to illustrations shown here:) **NOTE: Adapter not for use in Canada.**

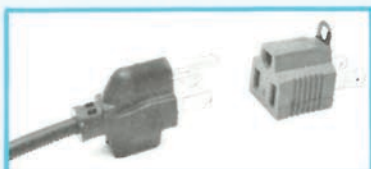

The Rainbow 3-prong cord plug with a 3-prong adapter for the 2-prong wall outlet.



Use one of the wall receptacle screws to ground an adapter to the outlet metal box.

4. Close supervision is necessary when any appliance is used by or near children. Do not allow Rainbow to be used as a toy or to run unattended at any time.
5. Unplug Rainbow when not in use. Turn machine off at switch before unplugging. Grasp the plug to disconnect from wall outlet to avoid damage to cord, plug, prongs, or receptacle.
6. Always disconnect cord from electrical outlet before servicing the Rainbow.
7. If Rainbow is in disrepair, do not attempt to operate.
8. Do not clean the unit, or unclog the hose until the plug has been removed from wall receptacle.
9. Do not operate out of an incandescent light fixture, or use with extension cords. Only plug the Rainbow cord into wall receptacle outlets that are properly grounded as explained and illustrated in paragraph three.
10. Do not use the Rainbow to unplug drains. If sewer gas is pulled into an electrical appliance, the hazard exists it could cause an explosion.
11. No one should ever touch a metal sink, cold or hot water pipe with one hand while touching the metal parts of any electrical appliance, light fixture or switch with the other hand. One's body could complete an electrical circuit to the ground. Additionally, wet skin surfaces can greatly increase this hazard if one neglects to follow the IMPORTANT SAFEGUARDS outlined in this section of the Rainbow Operation Manual.
12. CAUTION — ALWAYS REPLACE THE SEPARATOR IMMEDIATELY AFTER CLEANING. DO NOT OPERATE WITHOUT THE SEPARATOR.

WARNINGS: TO AVOID ELECTRIC SHOCK USE INDOORS ONLY

SPECIAL NOTICE . . . HAZARDS OF ELECTRICITY

A ground in your home can be any metal pipe or drain that goes into the ground, a floor furnace, or any electrical appliance that has a ground wire. Electrical hazards can arise when an electrical short occurs in an appliance or a light switch near enough to a ground and one touches both the appliance and the ground at the same time. When using any electrical appliance, caution should be exercised not to touch any metal pipes or grounds.

Although people have been mopping floors for years, the use of water for scrubbing or mopping can be an extra hazard. Because water is a conductor of electricity, we all know better than to touch an electrical switch or appliance while in the bath tub or shower.

While the Rainbow shell and switch are plastic, and will not carry loose electrical current, the hazard does exist that a film of water on the floor could reach some ground you may not be aware of. Therefore, exercise the same degree of caution, and follow the same safeguards when picking up water as you would if you were in the bath tub or shower.

WET PICK-UP INSTRUCTIONS

When using the Rainbow for wet pick up follow directions exactly:

1. Start with empty basin and never pick up more than two quarts without emptying. That is to say, *NEVER* let water level in basin get above post in center of basin.
2. Do not use when your hands are wet, or with bare or wet feet.
3. Do not stand in water when using the Rainbow for wet pick up. However, if in order to pick up water you find it necessary to stand on a wet (damp) floor, be absolutely certain you do not touch the metal parts of any electrical appliance, light fixture or switch.
4. Never use for wet pick up outside, on the ground in a basement, or in a room where a film of water can reach a ground.
5. Do not touch any metal parts of the Rainbow motor unit, such as removing the separator screw, until you have first disconnected the electrical cord from the wall outlet.

FOLLOW INSTRUCTIONS EXACTLY!

MESSAGE FROM THE MANUFACTURER REXAIR, Inc.

Rexair needs to protect its image with the ultimate consumer who buys the Rainbow vacuum cleaner for use at home.

Rexair manufactures the Rainbow cleaner for sales only to independent business persons, who are experienced in door-to-door selling. Since Rexair, Inc. does not attempt to create a market for its product through national advertising, demand for the product is created by the individual effort of thousands of door-to-door sellers, who, by means of in-home demonstrations, create interest in, and desire for, the Rainbow cleaner. These independent business people assume the responsibility for the legitimate distribution and service of the Rainbow cleaner directly through their employees and agents, or indirectly through their independent customer resellers, to the ultimate consumer.


Registered Distributors, who sell Rainbow products to irresponsible independent resellers, who have no concern for Consumer Protection and Deceptive Practice Laws, will be injuring both the buying public and the goodwill of the Rainbow cleaner.

While Rexair is selective as to the Independent Registered Distributor with whom it deals, Rexair has no agreement, or legal relationship, with the independent resellers of its Registered Distributors, and can only attempt to correct such abuses through pressures imposed on its Registered Distributors.

Since customer abuses cannot be permitted, Rexair's announced policy is to hold its Registered Distributors responsible for the cost of remedying the material misrepresentations of their independent customer resellers that result in injury to, or abuse of, any member of the ultimate buying public. This includes each Registered Distributor's responsibility to make prompt and workman-like service available through responsible service outlets in communities in which it elects to sell directly, or indirectly through its independent resellers, to the ultimate consumer users. These service facilities must be maintained wherever such sales have been made, even if the sales effort has been discontinued in such communities.

Should you have any problem or question regarding the above, you should first contact the Registered Distributor, from whom you purchased your Rainbow. If you have any problems locating our customer, the Registered Distributor, whom we hold responsible, write us at the address listed below, being sure that you include the Rainbow's Serial Number. Upon receipt of your letter, we will immediately send you the name, address, and phone number of that Registered Distributor. If you feel that you cannot obtain satisfaction from the Registered Distributor, please write to us immediately. All of our Registered Distributors know of their responsibility.

REXAIR, INC.
Attention: Customer Service
900 Tower Drive, Suite 700
Troy, MI 48007



**Rainbow[®]... THE MACHINE OF TOMORROW –
TODAY!.. Refreshes your indoor environment
— nature's way! Makes your home fresh as a
mountain stream!**

CLEANS CLEAN... WATER-WASHED CLEAN!



**YOU'VE NEVER SEEN
A Rainbow[®]...
LIKE THIS ONE!**

